


RED WIRE FROM
PREAMP BODY IS
ATTACHED TO 6
ON THE PREAMP
TERMINAL STRIP

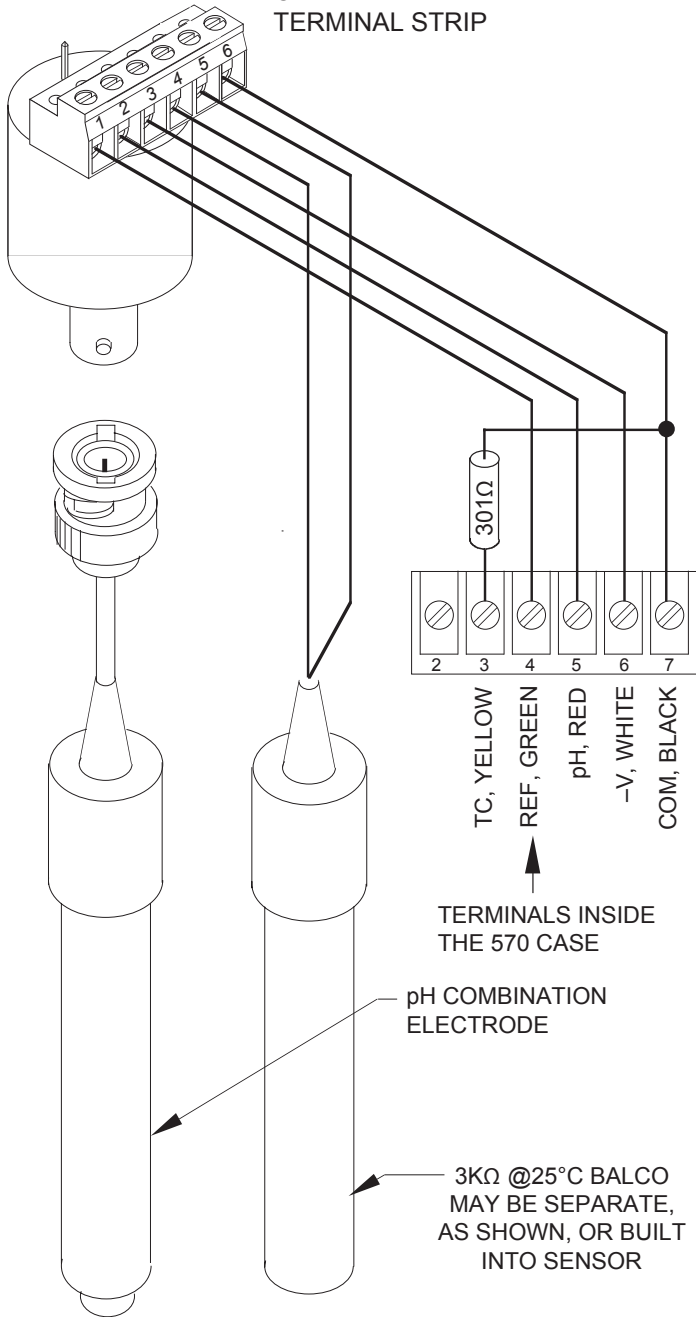

NOTES :

GENERAL

OUTPUT TO THE INSTRUMENT FROM THE PREAMP IS UNITY GAIN.

WHEN A COMBINATION ELECTRODE IS USED, REFERENCE CONNECTION IS MADE THROUGH THE BNC CONNECTOR.


TEMPERATURE COMPENSATION

CONNECT A 3KΩ @25°C BALCO TC ELEMENT TO TERMINALS 4 AND 5 OF THE PREAMP, AS SHOWN. THEN PUT A 301Ω RESISTOR ACROSS 3 AND 7 (BLACK AND YELLOW) IN THE INSTRUMENT.

EARTH GROUNDING WARNING

DON'T LET ANY OF THE LEADS OR THE BNC CONNECTOR TOUCH METAL PIPING, CONDUIT, OR OTHER EARTH GROUNDS. THIS WILL CREATE A "GROUND LOOP" AND CAUSE VERY UNSTABLE OR OFF-SCALE READINGS. TO CHECK FOR A GROUND LOOP, DISCONNECT THE BNC AND PUT AN OHM METER BETWEEN TERMINAL 5 OF THE PREAMP AND A GOOD EARTH GROUND. YOU SHOULD READ INFINITY. ANY OHMS READING AT ALL INDICATES A SHORT TO GROUND WHICH MUST BE FOUND AND ELIMINATED.

NOTES UNLESS OTHERWISE SPECIFIED:

		11751 Markon Drive	
		Garden Grove, CA. 92841 USA	
		phone: 714-895-4344 fax: 714-894-4839	
DRAWN	BOB HUNT	TITLE	
CHECKED		GL90B PREAMPLIFIER WIRING	
APPROVED		GREAT LAKES MODEL 570	
		SCALE	NONE
		DRAWING NO.	REV.
		SHEET	1 OF 1
		DRAWING NO. GL90B-570	